




Russell Hobbs



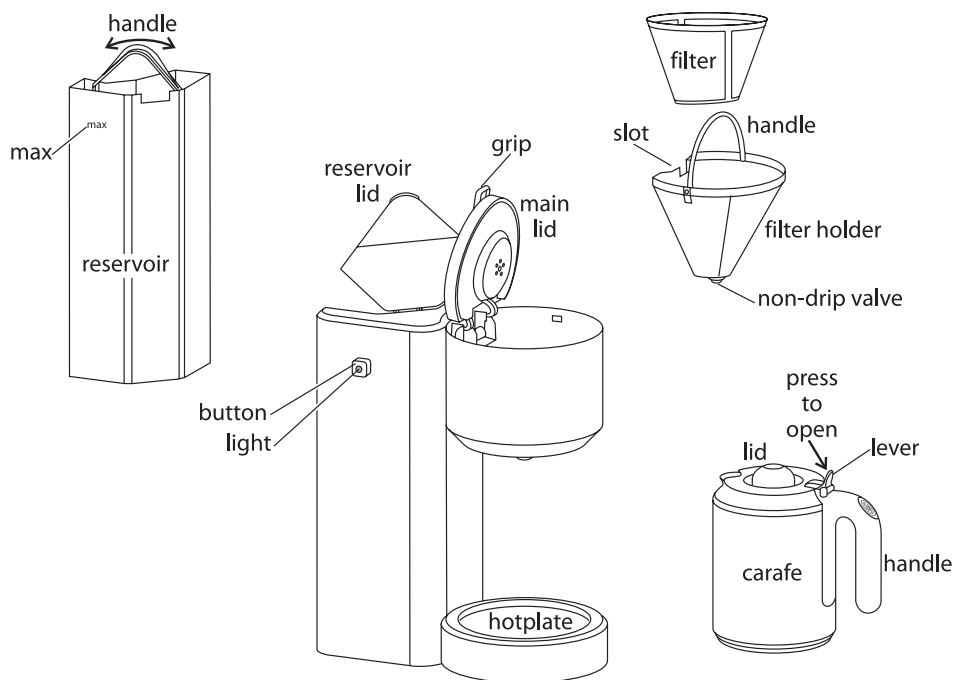


Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

important safeguards

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Don't touch hot surfaces (e.g. carafe, hotplate).
- 4 The scald hazard lasts long after boiling. Keep the appliance and cable away from the edges of worktops and out of reach of children.
- 5 Sit the appliance on a stable, level, heat-resistant surface.
- 6 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 7 Unplug the appliance when not in use, before moving and before cleaning.
- 8 Fill with at least 2 cups of water, but not above the **max** mark.
- 9 Put the carafe on the hotplate before switching the coffee maker on.
- 10 If you want to stop the coffee maker while it's brewing, press the button.
- 11 Let the appliance cool for about 10 minutes before adding water or re-using, to avoid spitting.
- 12 Don't put the carafe in a microwave oven.
- 13 Keep the appliance and the cable away from hotplates, hobs or burners.
- 14 Don't use accessories or attachments other than those we supply.
- 15 Don't use the appliance for any purpose other than those described in these instructions.
- 16 This appliance must not be operated by an external timer or remote control system.
- 17 Don't use the appliance if it's damaged or malfunctions.
- 18 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.

household use only

before using for the first time

- 1 Fill the reservoir to the **max** mark, and run the appliance without coffee.
- 2 Let it cool, discard the water, then use it normally.

ground coffee

- 3 If you want to buy ready-ground coffee, medium-ground filter coffee will give you the best results. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

storing coffee

- 4 Coffee is best kept in an airtight container in a cool dry place, or in the fridge. Exposure to air oxidises coffee and allows the flavour to evaporate.

milk

- 5 There's a great deal of contention on the subject of milk in coffee. Our view is that personal taste should rule, not convention. If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

bottled water

- 6 If you use bottled water, check that there are no added ingredients, flavourings, etc., and use "still" water, not "sparkling". The carbon dioxide which gives the "sparkle" will adversely affect the flavour of your coffee.

taste

- 7 Don't be tempted to reheat coffee in the appliance. You'll damage the appliance and the coffee will be undrinkable.
- 8 Clean the filter holder and carafe after each use. Residue from a previous brew will spoil your coffee.

preparation

- 9 Sit the appliance on a stable, level, heat-resistant surface.
- 10 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 11 Don't plug it in yet.

filling

- 12 Open the reservoir lid.
- 13 Use the carafe to fill the reservoir, to avoid overfilling.
- 14 Fill with at least 2 cups of water, but not above the **max** mark.
- 15 Alternatively, you may lift the reservoir off the appliance, fill it in the kitchen, and carry it back to the appliance.
- 16 Replace the reservoir in the appliance.
- 17 Close the reservoir lid
- 36 Use the grip to open the main lid.
- 19 Put filter-ground coffee into the filter. The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup of water.
- 20 Close the main lid.
- 21 Replace the carafe on the hotplate.

switch on

- 22 Put the plug into the power socket.
- 23 Press and release the button.
- 23 The light will come on.
- 25 Shortly afterwards, coffee will start to drip into the carafe.

- 26 You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.
- 27 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds. This may not sound much, but you'll find it's more than enough time to pour a couple of cups of coffee.
- 28 When you replace the carafe on the hotplate, the non-drip valve opens, to let any remaining coffee through.
- 29 When it's done, the hotplate will keep the carafe warm.

auto shut-off

- 30 About 2 hours after brewing, the coffee maker will shut down. The hotplate and the light will go off.
- 31 If left for much more than an hour, chemical changes in the coffee liquor start to affect the flavour. It's best to pour it away and make a fresh pot.

finished?

- 32 Press and release the button.
- 33 The light will go off.
- 34 Unplug, and let the appliance and carafe cool down fully before cleaning, or for about 10 minutes before refilling.

caution Raising the lid before the coffee maker has cooled down may release steam, creating a scald hazard.

care and maintenance

- 35 Unplug the appliance and let it cool down before cleaning or storing away.
- 36 Use the grip to open the main lid.
- 37 Tip the contents of the filter into the bin – don't flush coffee grounds down the sink. They'll build up and cause a blockage.
- 38 Remove the carafe from the hotplate.
- 39 Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.
- 40 You may clean the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all traces of soap.
- 41 Clean the outside surfaces of the appliance with a damp cloth.
- 42 Don't put any part of the appliance in a dishwasher.
- 43 Don't put the appliance in water or any other liquid.
- 44 Don't use harsh or abrasive cleaning agents or solvents.

descaling

- 45 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.
- 46 Descale regularly. If you notice the brewing time getting longer, shorten the time between descalings. In areas of very hard water it may be necessary to descale as often as once a month, or to use filtered water instead of ordinary tap water.
- 47 Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler. When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water, but without coffee. Discard the water to ensure that no chemical residues are left in the coffee maker.
- ✳ Products returned under guarantee with faults due to scale will be subject to a repair charge.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



CHANGING THE PLUG


Should the need arise to change the fitted plug, follow the instructions below.

Please note, connecting to other power sources may damage the appliance.

Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

- Green/Yellow = Earth
- Blue = Neutral
- Brown = Live

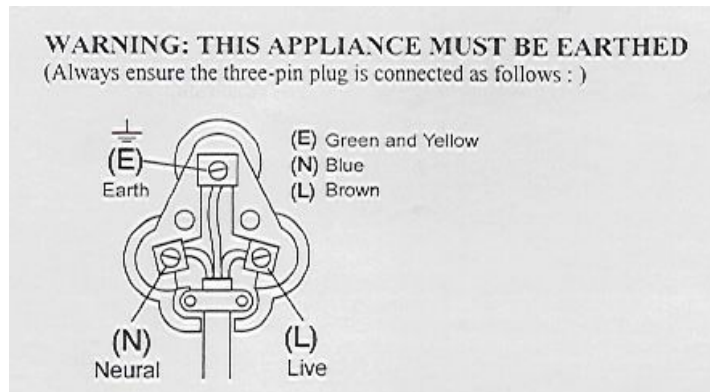

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES / TEDELEX TRADING (PTY) LTD

JOHANNESBURG
29 HERONMERE ROAD
BOOYSENS, JOHANNESBURG, 2016
CAPE TOWN
DURBAN

TEL NO. (011) 490-9000

TEL NO. (021) 535-0600

TEL NO. (031) 792-6000