




Russell Hobbs



instructions

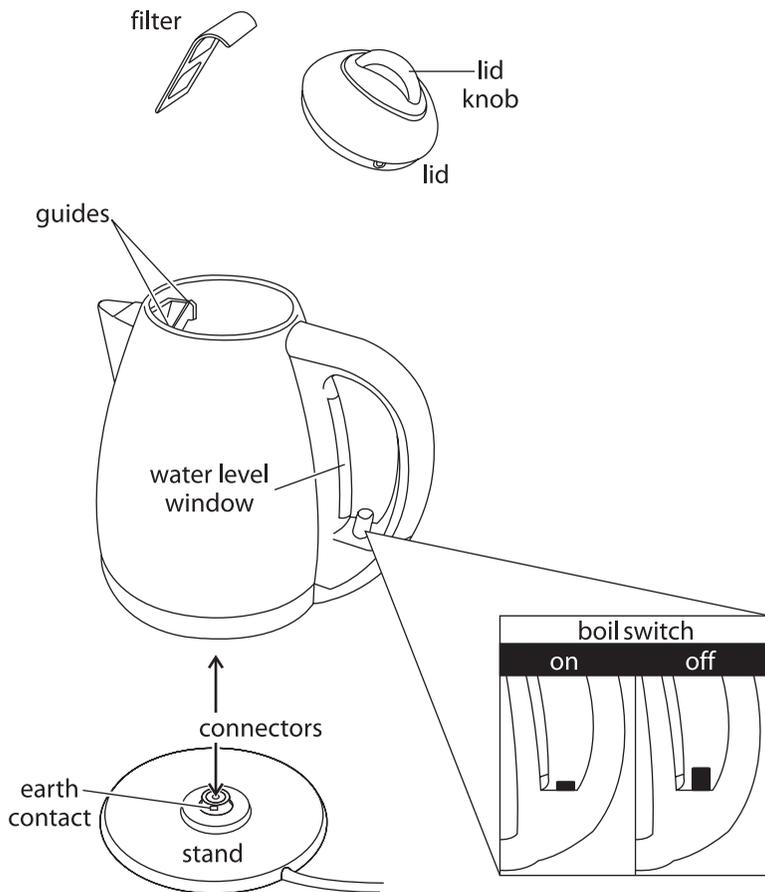

Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

important safeguards

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult.
- 2 Don't put the kettle, stand, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Don't touch hot surfaces. Use the handle and lid knob.
- 4 Don't open the lid while the water is heating.
- 5 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 6 The scald hazard lasts long after boiling. Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Wind excess cable beneath the stand.
- 9 Unplug the stand when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 10 Check the lid is fully closed before switching the kettle on, otherwise it may not switch off.
- 11 Check the kettle is properly located on the stand before switching on.
- 12 Don't switch on unless the kettle contains at least 2 cups of water.
- 13 Don't fill past max, or it may spit boiling water.
- 14 Remove the kettle from its stand before filling or pouring.
- 15 Keep the kettle, stand, cable, and plug away from sources of heat.
- 16 Don't use the kettle for any purpose other than heating water.
- 17 Use the kettle only with the stand supplied (and vice versa).
- 18 This appliance must not be operated by an external timer or remote control system.
- 19 Don't operate the appliance if it's damaged or malfunctions.
- 20 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.

household use only

before using for the first time

Fill to max, boil, discard the water, then rinse. Do this three times, to remove manufacturing dust, etc.

positioning

- 1 Put the stand on a stable, level surface. Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 2 Wind excess cable beneath the stand.

filling

warning keep clear, steam may escape from the lid.

- 3 Remove the kettle from the stand.
- 4 Grip the handle in one hand, grip the lid knob in the other, and pull the lid off.
- 5 Fill with at least 2 cups of water, but not above max
- 6 If you overfill, the kettle may spit boiling water.
- 7 Replace the lid, and press down to secure it.
- 8 Check the lid is closed, or the kettle won't switch off when it boils.

switching on

- 9 Plug the stand into the wall socket.
- 10 Gently position the kettle on the stand
- 11 Press the switch down.
- 12 The switch will light up, and the kettle will heat up.

switching off

- 13 When the water has boiled, the kettle will switch off automatically, the switch will return to the "off" position and the light will go off.
- 14 The kettle can be switched off at any time before the water boils by lifting the kettle off the stand.

general

- 15 Remove the kettle from the stand before pouring.
- 16 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 17 Don't tilt the kettle backwards, water might get on to the control area. If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.
- 18 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch off automatically, which then condenses and escapes via vents under the kettle.
- 19 You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.

using with insufficient water

- 20 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 21 To prevent the kettle cycling on and off, remove the kettle from the stand and let it cool before replacing it on the stand.
- 22 Sit the kettle on the work surface till it's cold.
- 23 Don't fill it the kettle till it's cold, or it may spit.

care and maintenance

- 24 Unplug the stand from the wall socket, and let the kettle cool down before cleaning.
- 25 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 26 Wipe the stand with a damp cloth.
- 27 Keep all connectors and sockets dry.
- 28 Don't put the kettle or stand in liquid.
- 29 Don't use harsh or abrasive cleaning agents or solvents.

descale regularly – even in soft water areas

30 **Limescale** may be white, coloured, even rusty-looking, but it's normally visible.

31 **Phosphate** scale isn't generally visible, but it's there, even in soft water areas.

32 **All scale** causes overheating, which reduces the life of the element, and may trigger the boil-dry cut-out. So, even in a soft water area, descale at least monthly, to help keep your kettle in working order.

33 Use a descaler suitable for plastic products (all kettles have plastic parts). Follow the instructions on the descaler, then rinse several times, fill, boil and discard the water, to remove all chemical residues.

✳ Products returned under guarantee with faults related to scale will be subject to a repair charge.

quiet-boil and scale

34 The quiet-boil feature is basically a bumpy coating and a diffuser, both attached to the floor of the kettle. As you use the kettle, scale will fill in the bumps, counteracting the quiet-boil coating.

35 If you notice your kettle getting noisier – descale it.

36 Don't look inside to see if there's any scale – phosphate scale isn't visible, so you won't see anything. Just descale the kettle.

37 Don't try to move or remove the diffuser – you'll break it.

water filter

38 Scale particles suspended in the water may give it a cloudy or greasy appearance.

The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

cleaning the filter

39 Check your hands are free from soap, or anything which might leave a taint.

40 Remove the kettle from the stand.

41 Remove the lid.

42 Slide the filter up and out of the guides on either side of the spout.

43 Rinse the filter under a running tap while brushing with a soft brush.

44 Rinse the kettle, in case scale particles have fallen inside.


56 Slide the filter down into the guides.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

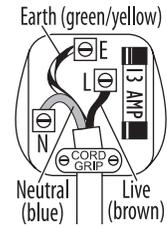

spare parts

Note the Model No (on the rating label) and the parts you need, ring 0845 658 9700 or email service@saltoneurope.com for prices, then purchase using VISA or MASTERCARD.

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

439-451