

Russell Hobbs®

INSTRUCTIONS AND WARRANTY



MODEL NO. RHC01

RUSSELL HOBBS CAN OPENER

Congratulations on purchasing our RUSSELL HOBBS CAN OPENER. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS CAN OPENER


IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalids the warranty and the supplier can not be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. Close supervision is required when any appliance is used near or by children or invalids.
7. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
8. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
9. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
10. Never immerse the unit in water or any other liquid for cleaning purposes.
11. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
12. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
13. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.

14. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
15. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
16. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
17. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
18. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
19. DO NOT carry the appliance by the power cord.
20. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
21. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
22. Ensure that the switch is in the "Off" position after each use.
23. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
24. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
26. Children should be supervised to ensure that they do not play with the appliance.

PARTS DIAGRAM


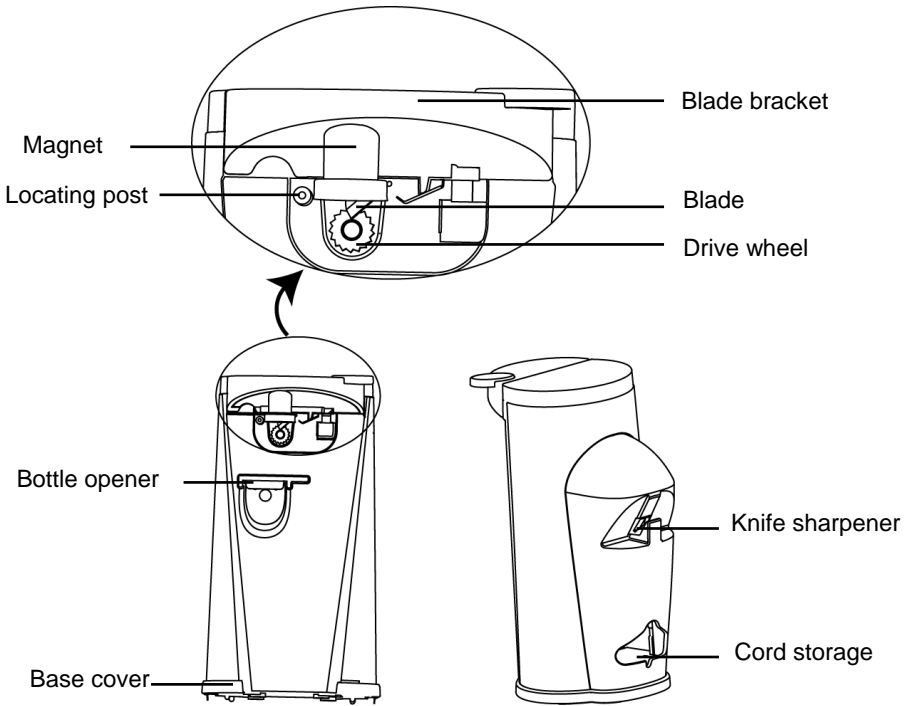


OPERATING INSTRUCTIONS

1. Attach blade bracket to the can opener. Make the key tabs align with the key slots, push it forward (Fig. 1), then release the blade bracket (Fig. 2).


Fig.1

Fig.2

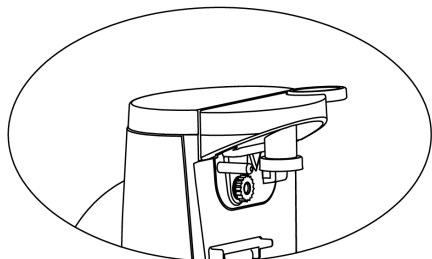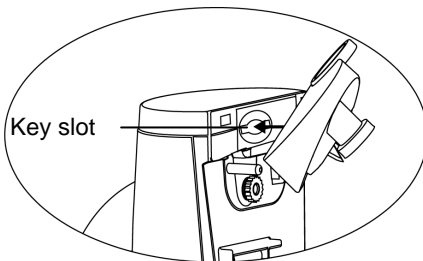

2. Lift the blade bracket, tip the can so that the rim is under the locating post, the lid of the can will be held by the magnet. Press the right side of the blade bracket down, making sure the blade is inside the rim (Fig. 3). The drive wheel will actuate the can to rotate and the blade will cut the can open.

Fig. 3

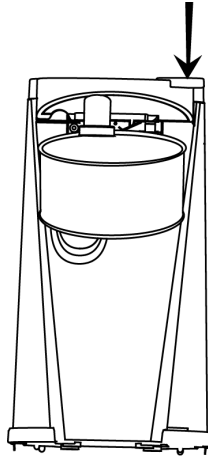

3. Because of the hands-free feature it is not necessary to hold the blade bracket down or support the can during cutting. However, you may have to hold the housing of the can opener when cutting heavier cans.
4. When the can is open, the can opener will stop automatically. To remove the can, hold the can with one hand and raise the blade bracket with the other.
CAUTION: Avoid contact with the cut edges of the can or lids as they are sharp.
5. Carefully remove the lid from the magnet and discard.
Note: The time for opening cans continuously must not exceed 4 minutes.

CAN OPENING TIPS


1. This can opener should not be used to open cans designed to be opened in a another manner, such as a pull tab, peel-off foil seal or a rolling key. This can opener will not open rimless cans or cans with angled corners.
2. If there is a dent in the rim of a can, open the other end or start the cutting action just beyond the dent.

3. Cans with heavy seams, uneven rims or odd shapes may cause the can opener to stall. If this occurs, turn the can slightly by hand to aid the cutting action.

OPENING BOTTLES

1. Make sure the can opener is unplugged.
2. Position the cap of the bottle under the metal hook in the bottle opener (Fig.4).
3. Make sure the metal hook is not under the bottle neck, or the glass may break. Hold the can opener with one hand and pull down to pop the cap off with the other.
4. The bottle opener at the front of the unit will only remove metal bottle caps. Do not use it for screw-off caps, punch in tabs, or on cans with pull rings.

 
Fig. 4

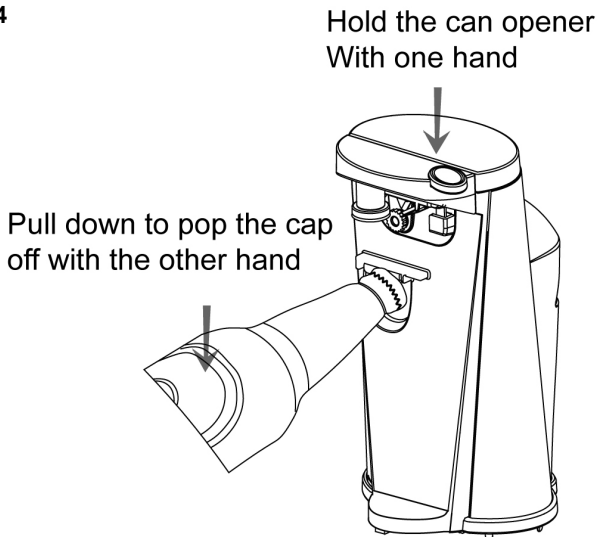

TO USE THE KNIFE SHARPENER

1. Make sure the can opener is unplugged.
2. Place the knife which is intended to be sharpened in the slot of the knife sharpener at the back of the unit.
3. For best results, sharpen the entire length by carefully pulling the knife through the slot back and forth (Fig.5), until you achieved the desired sharpness.
4. After sharpening wash and dry the knife.

Fig. 5

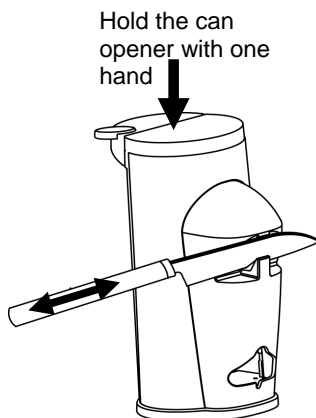

SHARPENING TIPS

1. Clean and dry knives before sharpening.
2. Do not attempt to sharpen serrated blades, as this will smooth their edges.
3. Do not sharpen scissors.

CLEANING AND MAINTENANCE

- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning.
- Remove the blade for easy cleaning, lift the blade bracket up and pull blade assembly out. Wash the blade assembly in warm, soapy water, rinse and dry well.
- Before replacing the blade assembly, wipe the can opener housing and area around the drive wheel with a slightly damp cloth or sponge. Do not let water enter the can opener.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the can opener in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner. Rinse and dry with a clean, damp cloth.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Tedalex Trading (PTY) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE
PRODUCED.**

W A R R A N T Y

1. Tedalex Trading (Pty) Limited ("Tedalex") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
3. The faulty product must be taken to the supplier's service centre to exercise the warranty.
4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

TEDELEX TRADING (PTY) LTD

www.amap.co.za

011 490-9600 (Jhb)

031 792-6000 (Dbn)

021 535-0600 (CT)

