

Russell Hobbs®

INSTRUCTIONS AND WARRANTY




MODEL NO. RHC1960

RUSSELL HOBBS CERAMIC UPRIGHT HEATER

Congratulations on purchasing our Russell Hobbs Ceramic Upright Heater. Each unit is manufactured to ensure safety and reliability. Before using this heater for the first time, please read the instruction manual carefully and keep it for future reference.

PART NAME : FRONT AND BACK

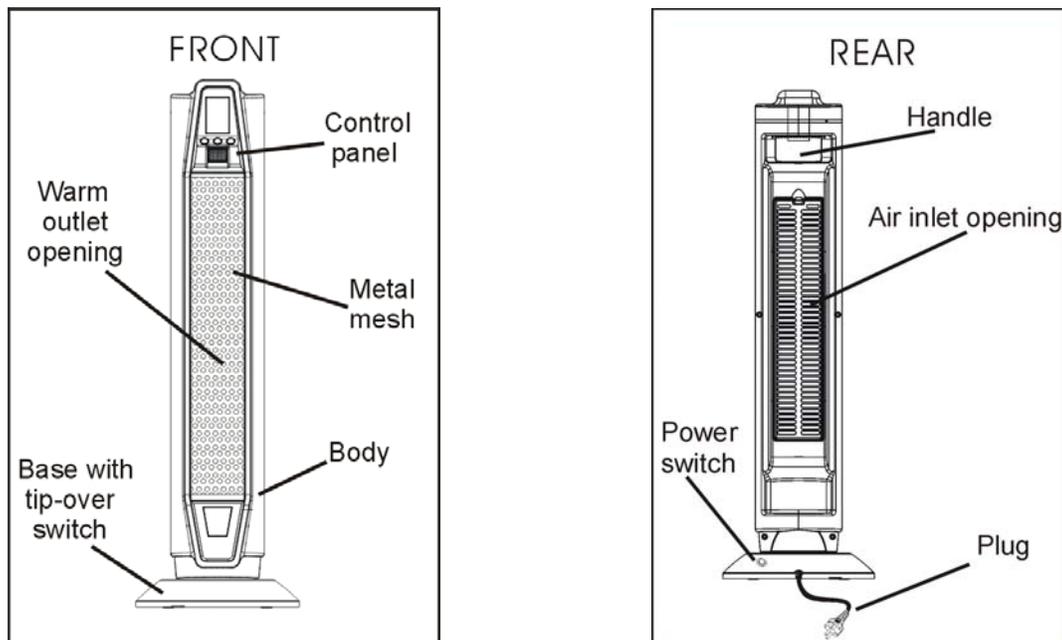

FEATURES OF THE RUSSELL HOBBS CERAMIC UPRIGHT HEATER

- The Russell Hobbs Ceramic Upright Heater has an 45° oscillation function which allows it to heat more of the room.
- Safety PTC heating element.
- Timer function allowing up to 8 hours.
- Two heat settings on the heater mean that you can set the heater to LOW (1100W) or HIGH (2000W).
- The variable thermostat knob allows you to control the output of the heater, according to the ambient temperature and size of the room being heated.
- The power on indicator light will show when the heater is in use.
- LCD Display for mode indicator, temperature indicator and set time indicator
- The over-heat protection switch will automatically switch off the heater in a case of overheating and switch it on again when the heater cools down sufficiently.
- Remote control for ease of use (batteries not supplied).
- Safety tip over safety switch.

IMPORTANT SAFEGUARDS


When using any electrical heater, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any heater.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the heater and cause injury to the user.
4. The heater is intended for household use only. Commercial use invalidates the warranty and the supplier can not be held responsible for injury or damage caused when using the heater for any other purpose than that intended.
5. Close supervision is required when any heater is used near or by children or invalids.
6. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
7. Do not use the heater if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
8. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
9. Never immerse the unit in water or any other liquid for cleaning purposes.
10. Remove the plug from the socket by firmly pulling the plug. Do not pull on the cord to disconnect the heater from the mains. Always unplug the unit when not in use.
11. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
12. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
13. Ensure that the cord is not in a position where it can be pulled on inadvertently.
14. Do not allow the cord to touch hot surfaces.
15. Use of an extension cord with this heater is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the heater to avoid overheating of the extension cord, heater or

- plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
16. This heater is not suitable for outdoor use. Do not use this heater for anything other than its intended use.
 17. DO NOT carry the heater by the power cord.
 18. Do not leave this heater unattended during use. Always unplug the unit when not in use or before cleaning.
 19. Ensure that the switch is in the "Off" position after each use.
 20. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
 21. In case of technical problems, switch off the heater and do not attempt to repair it yourself. Return the heater to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this heater.
 - 22. DO NOT COVER THE HEATER WHEN IN USE.**

OPERATION

Control Panel

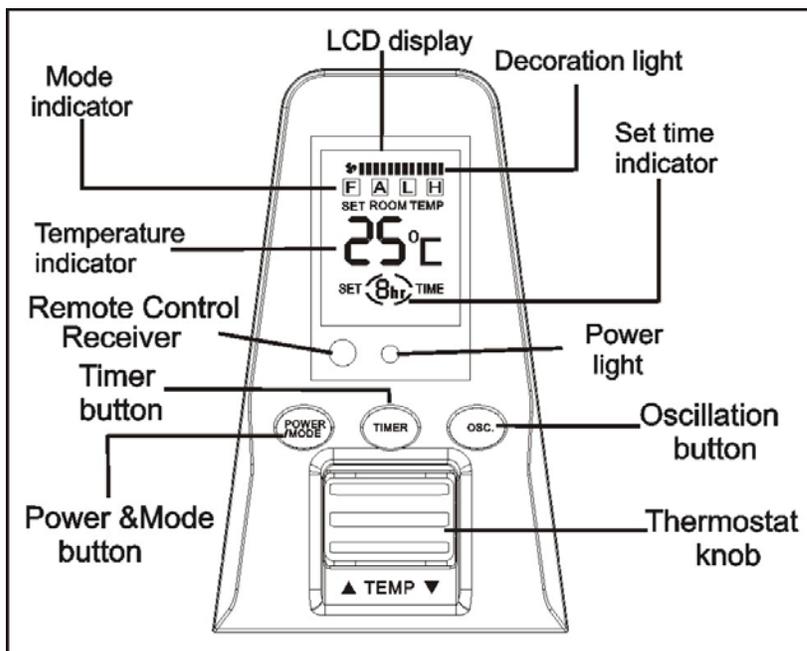

OPERATING INSTRUCTIONS

1. The heater must be placed on a flat level surface.
2. When heater is plugged in the power switch is turned on, there will be a “beep” and a red power light to indicate that the power is on. The red light will remain lit until the power switch is off or the heater is unplugged from the outlet.
3. Press the POWER/MODE BUTTON to start the heater.
4. When turning the heater on, the unit will be in the LOW heat mode (1100 watts), the FAN will start to run, the “” in the LCD will be highlighted. At the same time the “L” in the LCD will be highlighted. The decoration light will be lit from 1 and will move to 6 gradually.
5. When POWER/MODE button is pressed at this point, the heater will be set into “HIGH” heat mode (2000 watts), and the “H” in the LCD will be highlighted. The decoration light will be lit from 1 and will move to 6 gradually.
6. Pressing the POWER/MODE button once more will set the heater into AUTO mode (2000 watts). Note that the display now displays a SET TEMP indicator (see THERMOSTAT INSTRUCTION). At the same time the “A” in the LCD will be highlighted.
7. Press the POWER/MODE button again and the heater will be in the FAN mode (25 watts). The “F” in the LCD will be highlighted. FAN mode is for fan-only operation.
8. Pressing the POWER/MODE button again and the heater will go back to LOW heat mode. Continuing to press the POWER/MODE button will cycle the heater through LOW, HIGH, AUTO, FAN mode.
9. Press OSC. button, the heater will oscillate left and right. Press it again and the oscillation will stop.
10. To disconnect heater, press POWER/MODE button for about 4 seconds, and turn off the power switch, then remove plug from outlet.

TIMER FUNCTION

Press the Timer button and the light comes on indicating 1 hour of time. Press it again and the light indicates 2 hours. Press it a third time and it indicates 3 hours. The total time that can be indicated is 8 hours. Continuing to press the Timer button will cycle through the settings until all timer lights are off. When the time indicator lights are off, the heater will run continuously.

Once the timer has been set, the timer will count down the hours in 1 hour and the LCD will display the remaining operating time, until the heater will switch off.

THERMOSTAT INSTRUCTION

1. Pressing the POWER/MODE button until the display shows AUTO mode.
2. To adjust set temperature, Rotate the Thermostat knob up to increase the desired temperature and down to decrease the desired temperature.
3. When the air temperature raises 2 degrees above the set temperature, the heater will stop heating at once.
4. When the air temperature drops 2 degrees below the set temperature, the unit will come back on.

REMOTE CONTROL



- 1) Press the POWER button and the heater will turn on.
- 2) Press the OSC to start and stop the oscillation function.
- 3) Press the TIMER allowing you to program up to 8 hours
- 4) Press the TEMP. buttons (+,-) to increase or decrease temperature.
- 5)The remote control is powered by two AAA batteries.
There is a cover on the back of the remote control that can be removed for replacement of the batteries as required.

PLEASE NOTE : BATTERIES NOT INCLUDED

CLEANING AND MAINTENANCE

- This heater is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the heat control is set to Off. Ensure the heater has cooled down.

- The body of the heater should be cleaned with a damp cloth. Do not let water enter the heater.
- Do not use bleach or other abrasive substance or solvents to clean your heater as it can be damaging to the finish.
- Do not immerse the heater in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner. Rinse and dry a clean, dry, soft cloth.

STORING THE HEATER

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the heater in its box or in a clean, dry place.
- Never store the heater while it is still wet or dirty.
- Never wrap the power cord around the heater.

SERVICING THE HEATER

There are no user serviceable parts in this heater. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the heater should be returned to an approved Amalgamated Appliances (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.


CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on 230V current only. Connecting to other power sources may damage the heater. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth
Blue = Neutral
Brown = Live

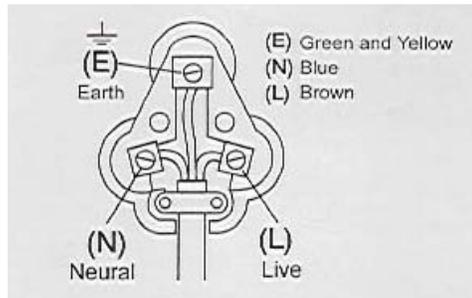

PLEASE NOTE: THIS IS A CLASS II PRODUCT AND DOES NOT NEED TO BE EARTHED

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE
PRODUCED.**

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES (PTY) LTD

JOHANNESBURG
29 HERONMERE ROAD
P O BOX 39186
BOOYSENS, JOHANNESBURG, 2016

TEL NO. (011) 490-9000

CAPE TOWN
DURBAN

TEL NO. (021) 535-0600
TEL NO. (031) 792-6000

REGISTER YOUR PURCHASE ONLINE – www.russellhobbs.co.za