



# Russell Hobbs

## INSTRUCTIONS AND WARRANTY



**MODEL NO. RHFH913**

**Russell Hobbs EXTREME ECO Fan Heater**

Congratulations on purchasing our Russell Hobbs Extreme Eco Fan Heater. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

## **FEATURES OF THE FAN HEATER**

 
### **IMPORTANT SAFEGUARDS**

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using the fan heater.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the fan heater and cause injury to the user.
4. The fan heater is intended for household use only. Commercial use invalids the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This fan heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the heater by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the fan heater.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, the manufacturer or a qualified person must replace it in order to avoid an electrical hazard.
9. Do not use the fan heater if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
10. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
11. Never immerse the unit in water or any other liquid for cleaning purposes.

12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the heater from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
13. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
14. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
15. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
16. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
17. Do not use the fan heater on a gas or electric cooking top or over or near an open flame.
18. Use of an extension cord with this heater is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the fan heater to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
19. This fan heater is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
20. DO NOT carry the fan heater by the power cord.
21. Do not leave this heater unattended during use. Always unplug the unit when not in use or before cleaning.
22. Always operate the heater on a smooth, even, stable surface. Do not place the unit on a hot surface.
23. Ensure that the switch is in the "Off" position after each use.
24. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
25. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the fan heater to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine

# PARTS DIAGRAM

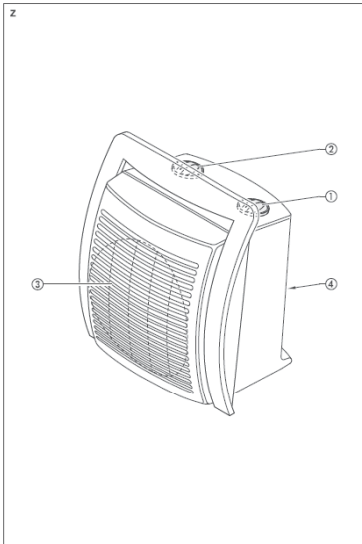

1. Thermostat
2. Power selector switch
3. Motor unit and air grid (front)
4. Air inlet grid

# OPERATING INSTRUCTIONS

- Power selector switch

<u>POSITION</u>	<u>FUNCTION</u>
<b>O OFF</b>	Appliance off
SUMMER	Cool air
* <b>ECO</b>	Warm air Eco function
* <b>RAPID</b>	Rapid heating

- Room Thermostat

 
The thermostat maintains the desired temperature: once reached, the appliance automatically turns off and will turn on again as soon as the temperature level drops.

<u>POSITION</u>	<u>FUNCTION</u>
*	Antifreeze
<b>MAX</b>	Maximum temperature

- Fan heater function

-Turn the power selector switch as seen below according to the desired type of heating:

### Position \*: ECO heating

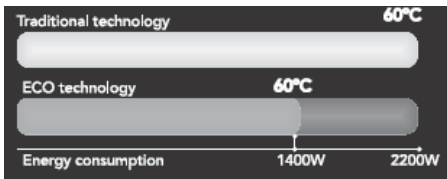

AT the ECO position you save up to 35% energy consumption. You will be able to warm your room to 60°C at 1400W where a normal heater will work at 2200W to heat the same room up to 60°C.

The Eco Extreme fan heater heats the environment in just a few minutes, using 35% less electricity. The high velocity blade is positioned slightly behind the heating element and uses ambient air temperature which is heated and circulated using considerable less electricity.

### Position \*: RAPID heating

-Regulate the thermostat depending on the temperature you wish to maintain.

- Cool air function

-Turn the thermostat to the maximum temperature **MAX**.

-Turn the power selector switch to position SUMMER.

- Antifreeze function

This function maintains the room temperature at +5°C.

When the temperature drops below this level, the fan heater turns on automatically.

-Turn the thermostat to the antifreeze setting \*.

-Turn the power selector switch as follows:

Position \*: ECO to gradually increase the temperature by +5°C.

Position \*: RAPID to quickly increase the temperature by +5°C.

## **CLEANING AND MAINTENANCE**

- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the heater is switched off.
  
- The body of the appliance and the stand should be cleaned with a damp cloth. Do not let water enter the appliance or the stand.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the heater in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner.

## **STORING THE APPLIANCE**

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

## **SERVICING THE APPLIANCE**

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Tedalex Trading (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

## CHANGING THE PLUG

 
Should the need arise to change the fitted plug, follow the instructions below.

**This unit is designed to operate on 230V-240V current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:**

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth  
Blue = Neutral  
Brown = Live

**WARNING: THIS APPLIANCE MUST BE EARTHED**  
(Always ensure the three-pin plug is connected as follows : )

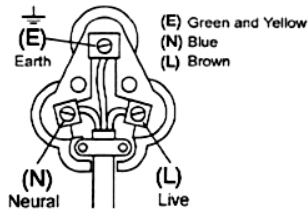

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE**

**IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

## **WARRANTY**

Tedex Trading (Pty) Limited (“the Supplier”) warrants to the original purchaser of this product (“the Customer”) that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier’s normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier’s liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier’s negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorised modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

### **TEDELEX TRADING (PTY) LTD**

JOHANNESBURG  
29 HERONMERE ROAD  
P O BOX 39186  
BOOYSENS, JOHANNESBURG, 2016

TEL NO. (011) 490-9000

CAPE TOWN

TEL NO. (021) 535-0600

DURBAN

TEL NO. (031) 792-6000

**[www.russellhobbs.co.za](http://www.russellhobbs.co.za)**