

Russell Hobbs®

INSTRUCTIONS AND WARRANTY



MODEL NO. RHSM030

RUSSELL HOBBS 4-IN-1 GOURMET SNACK MAKER

Congratulations on purchasing the Russell Hobbs 4-in-1 Gourmet Snack Maker. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS 4-IN-1 GOURMET SNACK MAKER

- The Russell Hobbs 4-in-1 Gourmet Snack Maker has a stylish stainless steel and black finish to match any kitchen.
- The patented glide action automatically opens the lid - simply push the button and release, and the unit will open automatically.
- The elements are thermostatically controlled with variable heat settings from 150°C to 190°C
- There are four cooking plates included: Sandwich, Waffle, Ribbed Grill and Flat Grill plates, which are all non-stick and easy to remove for cleaning.
- The 'Power On' and 'Ready-to-Cook' indicator lights will let you know exactly when the unit is ready for use.
- With powerful 700W elements, the Russell Hobbs 4-in-1 Gourmet Snack Maker will cook any snack to perfection.

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalids the warranty and the supplier can not be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. Close supervision is required when any appliance is used near or by children or invalids.

7. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
8. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
9. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
10. Never immerse the unit in water or any other liquid for cleaning purposes.
11. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
12. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
13. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
14. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
15. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
16. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
17. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
18. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
19. DO NOT carry the appliance by the power cord.
20. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
21. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
22. Ensure that the switch is in the "Off" position after each use.

23. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
24. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.

OPERATING INSTRUCTIONS

NOTE: Before using the product for the first time, set the hinge speed on the side of the product. Open the product. Using the knob above the back foot of the unit (on the same side as the temperature control knob), turn the knob clockwise to decrease the opening speed, or turn the knob counter-clockwise to increase the opening speed. This knob will only turn when the unit is open.

- Unpack the product, and wipe down the unit and all plates with a damp cloth. Allow to dry. Rub the plates with a light coating of margarine or cooking oil.
- Select the plates to be used, and insert them into the unit (see instructions below for changing plates)
- Place the unit on a firm, flat surface. Plug in the unit and switch on the electrical outlet.
- The red 'Power on' light will glow. The first time the unit is used, it will emit a little smoke. This should stop after about 5 minutes. Do not use the plates to cook in this time.
- Set the required temperature using the rotary control on the side of the unit.
- The unit will now heat, and when the selected temperature is reached, the green 'Ready-to-cook' light will glow.
- Place the food to be cooked into the unit, and press the lid closed until the lid clicks into place.
- When the food is cooked, open the unit, and remove the food using wooden or plastic accessories. Do not use any sharp or metal accessories, as these will damage the non-stick coating on the plates.
- Turn the unit off at the electrical outlet, and unplug the unit.

- Should you wish to cook more food, close the lid and allow the unit to heat up to the required temperature again, and follow the same cooking procedure as above.

HOW TO CHANGE THE COOKING PLATES

- Ensure the unit is unplugged from the electrical outlet and is cool. **DO NOT TRY TO CHANGE THE PLATES WHEN THE UNIT HAS JUST BE USED, AS THE PLATES WILL BE VERY HOT AND INJURY MAY OCCUR.** Always allow the unit to cool down fully before changing the plates.
- Open the unit using the button on the front of the unit.
- Keeping a hand beneath the top cooking plate, gently press the sliding button next to the top cooking plate of the unit in the direction of the cooking plate. This will release the cooking plate, remove the plate and place it in a safe place. Gently press the sliding button next to the bottom cooking plate in the direction of the cooking plate. This will release the bottom cooking plate, remove the plate and place it with the top cooking plate.
- Select the type of cooking plates to be used in the unit. Ensure that the cooking plates match. If the plates are mixed, this may damage the non-stick coating on the cooking plates. Only use cooking plates that are supplied with the unit.
- Gently slide the cooking plates into the unit, with the two bumps on the side of the cooking plates farthest from you. Press the cooking plates back and down until they clip into place. Ensure both cooking plates are firmly in place before using the unit.
- The unit is now ready for use.

COOKING PLATES SUPPLIED WITH THE UNIT:

The following types of cooking plates supplied with the unit are:

- **SANDWHICH PLATES:** These plates are used to make 2 sandwiches, cut into triangles.
- **WAFFLE PLATES:** These plates are used to make 2 square Belgian waffles.
- **RIBBED GRILL PLATES:** These plates are rectangular with ribs on the plates. These can be used to grill any foods, including steaks, fish and vegetables.
- **FLAT GRILL PLATES:** These plates are rectangular and flat. These can be used to fry any foods, including eggs, bacon and vegetables.

CLEANING AND MAINTENANCE

- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the unit is off and has cooled down completely before cleaning.
- It is much easier to clean the plates directly after they have been used. Wash them in warm, soapy water, rinse and dry well.
- The body of the appliance should be cleaned with a damp cloth. Do not let water enter the appliance.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the unit in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner. Rinse and dry a clean, dry, soft cloth.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Amalgamated Appliance (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.


CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on 230V-240V current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth
Blue = Neutral
Brown = Live

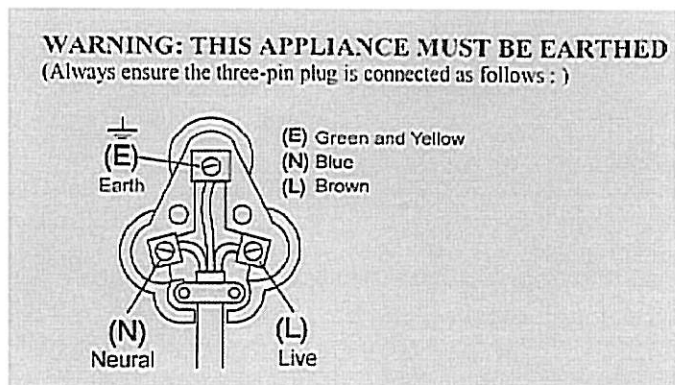

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE
PRODUCED.**

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES (PTY) LTD

JOHANNESBURG
29 HERONMERE ROAD
P O BOX 39186
BOOYSENS, JOHANNESBURG, 2016

TEL NO. (011) 490-9000

CAPE TOWN

TEL NO. (021) 535-0600

DURBAN

TEL NO. (031) 792-6000

WIN PRIZES ONLINE – www.russellhobbs.co.za