

AMALGAMATED APPLIANCES (PTY) LTD.
29 HERONMERE ROAD
BOOYSENS, JOHANNESBURG
2016

P.O. BOX 39186
BOOYSENS
2016

JOHANNESBURG TEL NO. (011) 490-9000
FAX NO. (011) 490-9399

CAPE TOWN TEL NO. (021) 535-0603

DURBAN TEL NO. (031) 792-6000



Russell Hobbs®

INSTRUCTIONS/WARRANTY



MODEL: RHBT-015
RUSSELL HOBBS 2 SLICE TOASTER

INTRODUCTION

Thank you for purchasing the Russell Hobbs 2 Slice Toaster (RHBT-015). Each unit has been manufactured to ensure safety, reliability and ease of use. Before use, please read the instructions carefully and keep for further reference.

BEFORE USING THE TOASTER FOR THE FIRST TIME

Before making toast for the first time, operate the toaster with the browning control set at the maximum setting, but without bread. This will help to burn off any dust etc. which may have accumulated on the elements. The new element may give off an unpleasant smell but this should not be a cause for alarm. Ensure the room is well ventilated while doing this.

IMPORTANT SAFEGUARDS

When using your Russell Hobbs 2 Slice Toaster, basic precautions should always be followed including the following:

- Make sure the power/voltage used corresponds to the one indicated on the rating label, located on the bottom side of the product.
- Use the toaster only for intended use as described in the instruction manual.
- The area around the toasting slots will become hot during use. Do not touch these surfaces.
- When using only one of the normal toasting slots, do not allow anything to enter the other slot, as both slots will become "live" when the bread carriage handle is lowered.
- Do not toast "battered" items, and do not make toasted sandwiches in the toaster, as this will create a fire hazard.
- Pita bread, waffles and similar products are unsuitable for use in an automatic toaster as they may expel fats on to the elements creating a fire.
- Do not use torn, curled up, or uneven slices of bread, as these may jam the eject mechanism.
- Should bread carriage become jammed during the toasting cycle do not attempt to release it. Unplug the toaster and allow it to cool down before carefully removing the bread. Do not use a knife, fork or other sharp instrument as these may cause damage to the elements.
- After use, unplug the toaster and let it cool down fully before cleaning and storing away.
- Do not operate the toaster unless the crumb tray is correctly fitted.

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorised modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

CLEANING

- Always unplug the toaster at the mains and leave to cool before cleaning.
- Allow the appliance to cool before continuing.
- Breadcrumbs are collected in crumb trays. Remove the crumbs by turning the toaster upside down and shake it gently. Never stick objects into the toaster as this may damage the appliance.
- Clean the outside with a damp cloth, and buff with a dry cloth. **DO NOT USE SCOURING POWDER OR ANY OTHER CLEANING PRODUCTS AS THEY MAY DISCOLOUR YOUR TOASTER.**

PROBLEM SOLVING

There are no user serviceable parts in this appliance. If the appliance is not operating correctly, please check that:

- You have followed the instructions correctly.
- The unit has been wired correctly, and the wall socket is switched on?
- Is the mains power supply ON?

If the appliance still does not work:

In the first instance, consult your retailer for possible repair or replacement. If your retailer fails to solve your problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- Give the reason why you are returning it.


If the supply cord is damaged, it must be replaced by the manufacturer or its service agents in order to avoid a hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Amalgamated Appliances Pty Ltd service centre or the outlet where purchased. Servicing outside the warranty period is still available but this will be chargeable.

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE

IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

- Do not wrap the mains lead around the toaster, use the cord storage clips underneath the base.
- Clean the crumbs out of your toaster frequently. This will avoid a build up of crumbs, which could cause a fire hazard.
- Do not cover toaster.
- Do not immerse unit, plug or cord in water, or allow for liquid to come into contact with any part of the toaster.
- Close supervision is necessary when any appliance is used by or near children.
- Operate the toaster on a smooth level surface.
- Never operate the toaster with a damaged power cord or plug or after it has fallen or been damaged in any way.
- Do not use outdoors.
- Do not allow cord to touch hot surfaces.
- To disconnect, grip plug and pull from wall outlet. Never pull on the cord.
- Do not try to cover, extend or stretch the mains cable.
- Never attempt to open any part or dismantle the controls. Responsibility for failure cannot be accepted if this instruction has been ignored.
- This product is intended for household use only. Industrial or commercial use invalidates the warranty.
- Use only original base provided.
- To reduce the risk of electrical hazards, it is recommended not to use an extension cord or plug adaptor.

NAME AND PARTS LOCATION

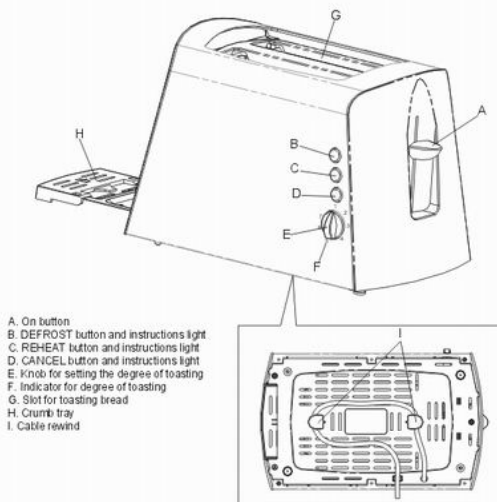

- A. 'ON' button
- B. 'DEFROST' button and instructions light
- C. 'RE-HEAT' button and instructions light
- D. 'CANCEL' button and instructions light
- E. Knob for setting the degree of toasting
- F. Indicator for degree of toasting/ Browning control
- G. Slot for toasting bread
- H. Crumb tray
- I. Cable re-wind.

TOASTING BREAD

Your 2 Slice Toaster can cope with all types of bread from light slimming to thicker sliced wholewheat. Lighter and dryer bread requires a slower setting than wholewheat or fresher bread; therefore we suggest you experiment to achieve the optimal result. If you are in any doubt start by

setting the browning control to the central position and thereafter adjusting either way to suit your taste.

- Position the toast on a firm, level, heat resistant surface, clear of curtains and other combustible material. Do not place the toaster on or near items that may become damaged even by a moderate source of heat.
- Plug the mains lead into the power socket and if necessary, switch the socket on.
- Place bread centrally into the toasting slots.
- Set the browning control to the degree of browning required – moving the browning control after toasting has started will not change the degree of browning.
- Various browning levels can be achieved by turning the control knob anti-clockwise for lighter and clockwise for darker toast.



- Press the bread carriage handle down fully.
NOTE: The handle will not lock down unless the toaster is connected to the electricity supply.
- When the toasting cycle is completed, the toast will pop up.

DEFROST FEATURE

To toast frozen bread – take bread from the refrigerator and place into the bread slots. Select the desired browning setting. Press the control lever down then press the DEFROST button. The DEFROST indicator light and CANCEL indicator light both come ON under this working mode.

CANCEL FEATURE

A safety cutout protection exists. If, for any reason, you wish to stop toasting before the cycle is completed, press the 'Cancel' button on the side of the toaster. This will automatically cause the bread/toast to pop-up and the toasting cycle will be terminated. To rest the toaster, wait a few seconds then depress the carriage handle again.

RE-HEAT FEATURE

If you wish to re-heat toast, place it in the slots and press down the bread carriage button until it locks. Then press the RE-HEAT BUTTON. The red light indicator will illuminate to confirm activation of the re-heat function. After about 40 seconds the re-heated bread will pop up automatically.