



Russell Hobbs

INSTRUCTIONS/WARRANTY



MODEL: RHS006 – CERAMIC STRAIGHTENER

INTRODUCTION

Thank you for purchasing the Russell Hobbs Ceramic Straightener. Each unit has been manufactured to ensure safety, reliability & ease of use. Before use, please read these instructions carefully, and keep them for further reference.


IMPORTANT SAFEGUARDS

When using your Russell Hobbs Straightener, basic precautions should always be followed including the following:

- Make sure the power used corresponds to the one indicated on the rating label.
- Use the Straightener only for use as described in this instruction manual.
- To protect against electrical shock, do not place Straightener in front of a window.
- Do not cover the Straightener.
- Do not immerse unit, plug or cord in water or allow for liquid to come into contact with any part of the Straightener.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the Straightener from the power supply when: not in use, when moving from one location to another, before putting on or taking off parts and before cleaning.
- Never operate the Straightener with a damaged power cord or plug, or after it has fallen or damaged in any way.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To disconnect, grip plug, and pull from wall outlet. Never pull on the cord.
- Do not try to cover, extend or stretch the mains cable.
- Never attempt to open any part or dismantle the controls. Responsibility for failure cannot be accepted if this instruction has been ignored.
- This product is intended for household use only. Industrial or commercial use invalidates the warranty.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PARTS NAME AND LOCATION

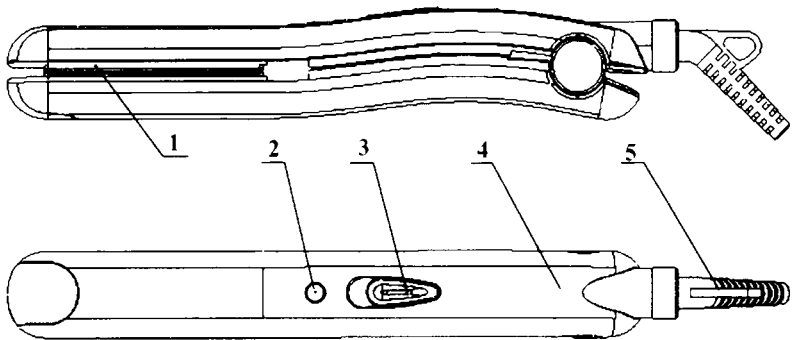

1. Ceramic plates
2. Power on indicator light
3. On/off switch (two setting for the temperature with 140°C-170°C and 180°C -210°C)
4. Handle
5. Swivel cord

SPECIFICATIONS OF STRAIGHTENER

Model No: RHS006

Rating Voltage: 220-240V

Rating Frequency: 50HZ

Rating Power: 30W

PREPARING FOR USE

Please read and retain these instructions before operating for future reference.

- Remove all packaging and keep safe until satisfied with your product
- Do not plug in until ready to use
- Ensure hair is completely dry and tangle free before use

OPERATING INSTRUCTIONS

IMPORTANT: THIS PRODUCT REACHES HIGH TEMPERATURES

- Plug into a suitable mains supply when the Straightener is ready for use.
- There is no need to preheat the Straightener .
- Always place Straightener on a solid, flat, heat resistant surface.
- Do not place Straightener on any soft or uneven surfaces such as carpets, bedding or rugs and never cover. The plates reach a high temperature quickly.
- Add heat protection spray throughout hair for protection, shine and a long lasting style.
- Switch the Straightener on using the ON/OFF switch(3). The power on indicator light will illuminate, and the plates will rapidly heat up and be ready for use within seconds.
- The Straightener will switch off automatically after it is switched on for 1 hour and not used.
- Separate a section of hair approximately 5cm in width and smooth it out with a brush.
- Place the chosen section of hair between the plates of the Straightener and close the plates.
- Take care not to touch the very hot plates.
- Hold the Straightener in place until the hair is fully heated this will be almost instant.

- When holding the Straightener, always ensure your fingertips are placed away from the hot plates.
- Once the hair is heated, holding the hair taut, carefully slide the plates along the selected section of hair, in one smooth movement – from the roots all the way down to the ends.
- Keep the strands of hair smooth whilst you work to avoid ridges.
- Switch off and unplug the Straightener immediately after use
Allow the Straightener to cool down fully before storing it away.

SAFETY PRECAUTIONS.

- These professional Straighteners reach very high temperature. Do not leave on one part of your hair for more than a few seconds as this may damage your hair
- Always avoid plates coming into contact with hands or skin
- Never cover the unit with anything, such as a towel
- Never place on a surface that isn't heat resistant and always position out of reach of children
- Never drop the Straightener on to a hard surface, as this may cause permanent damage to the solid ceramic plates.
- Do not immerse any part of the unit, cord set or plug in water or any other liquid
- Switch off and allow to cool fully , away from children on a heat resistant surface before cleaning and storage

HINTS AND TIPS

- Hair should be completely dry to achieve best results.
- Keep the strands of hair smooth whilst you work, to avoid ridges half way down.
- As with all Straighteners that reach salon high temperatures, do not use frequently to avoid damaging your hair.

CLEANING AND MAINTENANCE

- Unplug the Straightener from the supply socket and allow to cool fully before attempting to clean.
- This appliance reaches very high temperatures when switched on and will take time to cool down fully.
- Whilst cooling, place on a heat resistant surface. away from children and in a safe place. Never cover.
- The casing may then be cleaned by wiping over with a soft damp cloth (moistened with water only).
- Dry thoroughly with a soft towel before re-using.
- Do not use harsh abrasives or cleaners.
- Do not immerse the unit, cord set or plug in water or any other liquid.

STORAGE

- Ensure straightener is completely cool and dry.
- Do not wrap the supply cord around the appliance.
- Store in original box in a cool, dry, safe place out of children's reach.

FOR DOMESTIC USE ONLY.

- Do not immerse unit, mains cable or plug in water or any other liquid.
- Switch unit off before cleaning.
- Take care when handling hot surfaces.

Warning: Parts will get hot during use, especially the solid plates. Take care not to touch them and avoid the appliance coming into contact with the scalp, face, neck or hand.



Do not use this appliance near water

Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Warning: Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.

Warning: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

PROBLEM SOLVING

There are no user serviceable parts in this appliance. If the appliance is not operating correctly, please check that:

1. You have followed the instructions correctly.
2. The unit has been wired correctly and the wall socket is switched on
3. The mains power supply is ON.

If the appliance still does not work:

In the first instance, consult your retailer for possible repair or replacement. If your retailer fails to solve your problem and you need to return the appliance, make sure that:

1. The unit is packed carefully and complete into its original packaging.
2. Proof of purchase is attached.
3. Give the reason why you are returning it.

If the supply cord is damaged, it must be replaced by the manufacturer or its Service Agents in order to avoid a hazard. If service should become necessary within the warranty period, the appliance should be returned to an approved HOME OF LIVING BRANDS(PTY) LTD service center. Servicing outside the warranty period is still available, however this will be chargeable. If the power supplies cord becomes damaged the manufacturer or an approved service agent must replace it.

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

WARRANTY

1. Home of Living Brands(Pty) Ltd warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
3. The faulty product must be taken to the supplier's service centre to exercise the warranty.
4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

Home of Living Brands(Pty)Ltd

www.russellhobbs.co.za

011 490-9600 (Jhb)

031 792-6000 (Dbn)

021 552 5161 (CT)

